



## Audi A5/S5

### Quick reference guide



#### Dear Audi Driver,

This quick reference guide gives you a brief introduction to the main features and controls of your vehicle. However, it cannot replace the Owner's Manual and the other manuals supplied with the vehicle; these contain important information and safety warnings. We wish you safe and enjoyable motoring with your Audi.

AUDI AG

#### Locking and unlocking the vehicle

Press the required button.

##### 1 Unlocking button

Open one of the doors within about 60 seconds, otherwise the vehicle will lock itself again automatically.

##### 2 Unlocking button for boot lid

Press the button for at least 1 second.

##### 3 Locking button

The turn signals flash once to confirm that the doors and boot lid are properly closed and locked.



#### Convenience feature

 
Press and hold button 1 or 3 on the remote control key to open or close all the windows and the tilting panorama roof automatically.

#### ⚠ WARNING!

The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.



#### Anti-theft alarm system

The alarm system is automatically **set** when you lock the car, and **switched off** when you unlock the car with the remote control. If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.



#### Opening boot lid

If you

- press the  button on the remote control key,
- or pull the  button on the driver's door,
- or press the catch on the boot lid, the boot lid will be unlocked and opened.

#### Securing the boot lid in the open position

Press up the open boot lid slightly.

#### Opening/closing the tilting panorama roof

Press/pull the switch in the direction indicated by the arrows. Press/pull the switch again when the panorama roof is in the desired position.



#### ← advanced key

The advanced key allows you to lock and unlock the vehicle and start the engine without handling the key itself. You only need to have the remote control key on your person.

#### Unlocking the vehicle

Take hold of a door handle. The vehicle will be unlocked automatically.

#### Locking the vehicle

Briefly touch the locking sensor on one of the door handles. The selector lever must be in position **P** on vehicles with automatic gearbox.

*Note:* If you keep hold of the sensor, this will also close the windows and the tilting panorama roof.

## Adjusting front seats

### Manual seat adjustment

#### 1 Adjusting head restraint

*To raise head restraint:* Take hold of the sides of the head restraint with both hands and move it up as required

*To lower head restraint:* Press the button on the side and move the head restraint down.

#### 2 Easy entry function

Slide the lever upwards and fold the backrest down to the front.

#### 3 Adjusting backrest

Take your weight off the backrest and turn the knob.

#### 4 Adjusting seat height

Lift or press the lever repeatedly until the seat reaches the desired height.

#### 5 Adjusting lumbar support

Press the appropriate part of the switch.

#### 6 Adjusting angle of seat cushion

Lift or press the lever repeatedly until the seat reaches the desired height.

#### 7 Moving seat backwards or forwards

Lift the lever and move the seat into the desired position.

Then release the lever and move the seat further until the catch engages.

#### 8 Adjusting seat cushion

Lift the button and move the seat cushion.



## Starting/stopping the engine

### Starting the engine

- Insert the key in the ignition lock.
- Manual gearbox: Press the clutch pedal and select neutral gear.
- Automatic gearbox: Press the brake pedal and move the selector lever to **P** or **N**.
- Press the key in briefly.



On vehicles with diesel engine, keep your foot on the clutch (manual gearbox) or brake (automatic gearbox) until the engine starts.

### Switching off the engine when the vehicle is stationary

- Vehicles with automatic gearbox: Move the selector lever to **P** or **N**.
- Press the key in briefly.

### Switching the ignition on/off

- Press in the key **without** pressing the clutch (manual gearbox) or brake pedal (automatic gearbox).

### Electrical seat adjustment

#### 9 Adjusting lumbar support

Press the appropriate part of the switch.

#### 9 Adjusting seat height and moving seat backwards or forwards

Press the switch in the direction indicated by the arrows:

- ↑ To raise/lower the seat at the front
- ↓ To raise/lower the seat at the rear
- ↖ To raise/lower the seat
- ↗ To move the seat forwards/backwards

#### 10 Adjusting backrest/head restraint

Press the switch in the direction indicated by the arrows:

- ↖ Backrest further upright/further reclined
- ↑ Head restraint up/down

## Instruments



- ❶ Coolant temperature gauge
- ❷ Rev counter
- ❸ Warning and indicator lamps
- ❹ Speedometer
- ❺ Fuel gauge
- ❻ Reset button for trip recorder
- ❼ Display for:

- Driver messages
- Date, time and mileage recorder displays
- Warning symbols and auto-check control

- Digital speedometer, radio, CD and telephone
- Navigation system, outside temperature
- Selector lever position, gear-change indicator (recommends when to change gear)
- On-board computer (with two memories)
- Service interval display
- ❽ button for:
  - Activating digital clock and mileage recorder displays temporarily
  - Starting auto-check control manually
  - Calling up driver messages again
  - Setting speed warning 1

## Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front and rear passengers. To ensure that the seat belts, belt tensioners and airbags are fully effective, please note the following points:

### Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm and sit in a normal upright position. The top of the head restraint should be at eye level or higher. Always keep your feet in the footwell.



### Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).

### Safety of children in the vehicle

Children under 12 should travel on the rear seat. They must be protected by a child restraint system which complies with the European standard ECE-R 44 and is suitable for the child's height and weight. The safest place for the child restraint system is behind the front passenger's seat.





 











 
### ⚠ WARNING!

Please follow the instructions in the Owner's Manual. Please also read the instructions for your child seat.

© 2007 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to alteration and amendment. Printed in Germany. Concept and layout: Priemer GmbH.









### Warning and indicator lamps

	Dynamic steering		Emission control system <sup>1)</sup>
	Engine management <sup>1)</sup> or		lane assist (active)
	Glow plug system <sup>1)</sup>		lane assist (inactive)
	Electronic stabilisation program (ESP)		Main beam headlights
	Airbag system <sup>1)</sup>		Cruise control system
	Tyre pressure monitor		Anti-lock brake system <sup>1)</sup>
	Turn signals, hazard warning lights		Parking brake/Audi hold assist
	Trailer turn signals		Fault in brake system
	Seat belt warning lamp		

<sup>1)</sup> Should one of these warning lamps light up when driving, please contact a qualified workshop without delay.

### Warning symbols

If one of the red symbols lights up while you are driving, stop the car immediately, switch off the engine and refer to the Owner's Manual.

	Alternator		Add engine oil immediately
	Fault in the brake system		Steering defective
	Fault in the cooling system		Ignition lock defective
	Engine oil pressure too low		Tyre pressure monitor

Press the **SET** button to display the messages for the red and yellow symbols again for about 5 seconds.

### Filling the tank

The tank flap is locked and unlocked automatically via the central locking system.

#### Opening the tank flap


Press the left side of the flap. Unscrew the tank cap anti-clockwise and hook it onto the flap.

The correct **fuel grade** for your vehicle is shown on the inside of the tank flap.

The sticker listing the **tyre pressures** is located on the inside face of the driver's door (only visible when door is open).



### Instruments and controls

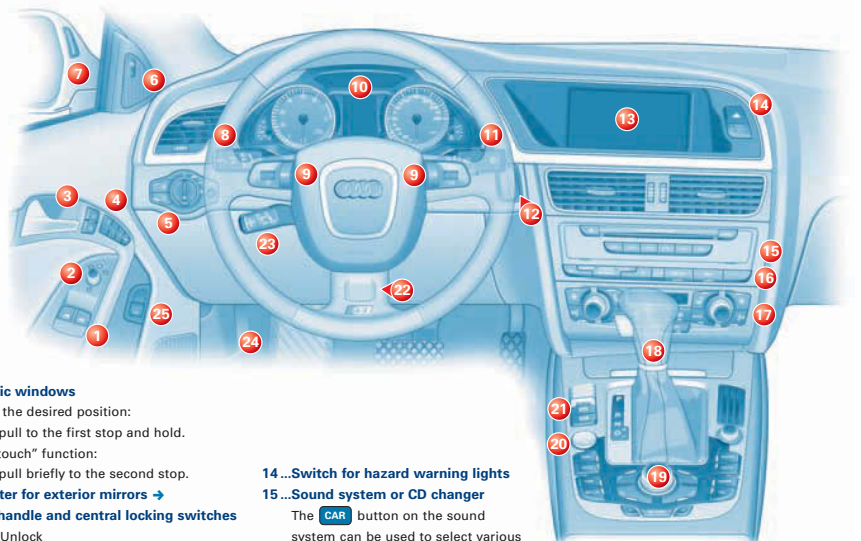

#### 1 .....Electric windows

To set the desired position:  
Press/pull to the first stop and hold.  
"One-touch" function:  
Press/pull briefly to the second stop.

#### 2 .....Adjuster for exterior mirrors →

#### 3 .....Door handle and central locking switches

 Unlock  
 Lock

#### 4 .....Recall buttons for seat memory

#### 5 .....Light switch →

#### 6 .....Button for side assist

To activate/deactivate the monitoring function for the "blind spot".

#### 7 .....side assist warning lamp

#### 8 .....Turn signal and main beam lever with button for lane assist →

#### 9 .....Controls for audio, telephone and speech dialogue system

#### 10 ...Instruments and warning/indicator lamps

#### 11 ...Control lever for windscreen wipers/washer and on-board computer →

#### 12 ...Ignition lock

#### 13 ...Display for sound system/MMI

#### 14 ...Switch for hazard warning lights

#### 15 ...Sound system or CD changer

The **CAR** button on the sound system can be used to select various vehicle settings.

#### 16...Controls for:

##### Audi drive select


The following drive modes are available:

**Comfort:** for relaxed driving and a comfortable ride (e.g. on motorways)

**Auto:** standard setting

**Dynamic:** for performance-oriented driving

##### Sun blind

 **ESP OFF** (deactivates and activates the Electronic Stabilisation Programme)

##### parking system plus

Press this switch to activate the system when moving forwards.

#### 17 ...Air conditioner

**Automatic mode:** Set the desired temperature separately for driver and passenger (e.g. +20 °C/+22 °C) and press the **AUTO** button.

#### 18 ...Gear lever (selector lever on vehicles with automatic gearbox) →

#### 19 ...MMI control console

#### 20 ...ENGINE START/STOP button →

#### 21 ...Audi hold assist and electro-mechanical parking brake →

#### 22 ...Lever for steering column adjustment →

#### 23 ...Control lever for cruise control system

#### 24 ...Bonnet release lever

#### 25 ...Switch for releasing the boot lid

▲ Warning and indicator lamps - Filling the tank ▼ Instruments and controls

→ Further information for these items is given on the following pages.

**[8] Turn signal and main beam lever with button for lane assist**

- 1 Button for lane assist
- 2 Right turn signals (with ignition off: right parking light on)
- 3 Left turn signals (with ignition off: left parking light on)
- 4 Main beam headlights
- 5 Headlight flasher



**[11] Control lever for windscreen wipers/washer and on-board computer**

- 0 Wipers off
  - 1 Brief wipe
  - 2 Activating intermittent wipe/rain sensor
- Move control **A** to set sensitivity level of rain sensor (wiper delay intervals).

**[2] Adjuster for exterior mirrors**

Turn the adjuster to select:

- 1 Left exterior mirror
- 2 Off
- 3 Right exterior mirror
- 4 Retract both exterior mirrors

Press the adjuster to move the mirror glass in the desired direction.

*Note:* When adjuster knob is in position **2** the mirrors are heated automatically at low outside temperatures (while ignition is switched on).



- 1 Slow wiper speed
  - 4 Fast wiper speed
  - 5 Automatic wash and wipe
- Pull lever towards you and hold.

**Controls for on-board computer**


Press the top or bottom of rocker switch **3** repeatedly to show the various computer displays in turn. Press and hold RESET button **4** to return the current display to zero.

**Function selector for display modes**

Press RESET button **4** repeatedly to select the *on-board computer*, *digital speedometer* and *navigation system* displays in turn.

**[5] Light switch**

- 1 Off
  - 2 AUTO
- Sensor-controlled activation/deactivation
- 3 Side lights
  - 4 Dipped beam/main beam headlights
  - 5 Instrument lighting
  - 6 Rear fog light
  - 7 Front fog lights

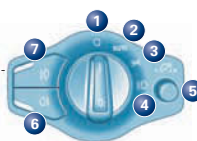

#### [21] Electromechanical parking brake

The parking brake replaces the conventional handbrake.

**Applying the parking brake when stopping:**

Pull button ❶.

**Releasing the parking brake:** Press brake pedal and press button ❷.

**Releasing automatically:** Drive off as normal. The parking brake will be released automatically when you drive off.

#### [21] Audi hold assist

The Audi hold assist function automatically detects when the vehicle is stationary and prevents it from rolling away. You do not have to keep your foot on the brake pedal.

**Switching on/off:** Press button ❸. The diode in the button will light up when the Audi hold assist function is activated.

#### [20] ENGINE START/STOP button

With the Audi advanced key you can start the engine without having to insert the key into the ignition lock. You only need to have the remote control key on your person.

**Starting the engine:** Press the clutch pedal, select neutral gear and press the START/STOP button ❶. On vehicles with automatic gearbox, move the selector lever to position **P** or **N**, put your foot on the brake pedal and press the START/STOP button.

**Switching off the engine:** Stop the vehicle, move the selector lever to position **P** or **N** and press the START/STOP button ❶.

**Switching the ignition on/off:** Press the START/STOP button **without** pressing the clutch (manual gearbox) or brake pedal (automatic gearbox).

#### [18] Selector lever for automatic gearbox

**P** Parking lock  
**R** Reverse gear  
**N** Neutral  
**D** Drive

To move the selector lever out of position **P** or **N**, or into position **P** or **R**, press the interlock button on the selector lever handle and the brake pedal simultaneously.


*Note:* If the Audi hold assist function is switched off, use the foot brake to hold the vehicle when stationary with the engine running (in all selector lever positions other than **P**).

#### Manual gear selection (tiptronic)

The tiptronic program enables you to change gear manually. From position **D**, push the selector lever to the right as far as the stop. The currently selected gear is shown in the instrument cluster display (bottom left). Push the selector lever forwards briefly to shift up a gear, or pull the lever back to shift down a gear.

#### ⚠ WARNING!

Do not move the selector lever to positions **P** or **R** when the vehicle is moving.

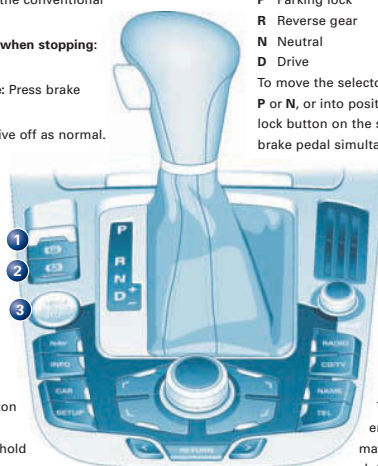

#### [22] Lever for steering column adjustment

Pull the lever and adjust the position of the steering column as required. Then push the lever towards the steering column until the catch engages.